


S1 - LIGHT/ SET

S2 - DATE/ MODE

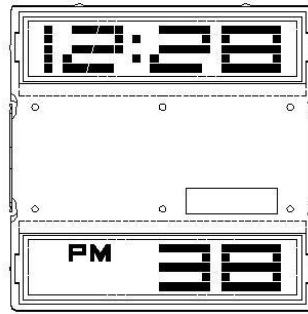

INSTRUCTION MANUAL

Features:

- Time display in Hour (12-Hour format), Minute and Seconds.
- Calendar display in Month and Date.
- EL backlight (Press S1)

Mode:

Normal Time Mode is the first mode. Continuously press “MODE” key to show the following in sequence:

Press S2
2nd time



Normal Time Mode

Date Mode



Press S2
1st time

Remark:

In Date Mode, it will auto return to Normal Time Mode if no key is pressed within 2 seconds.

Operation and setting of each mode:

1. Normal Time mode

- Press S2 to show Month and Date, then press S2 again to return to Normal Time Mode.
- Press S1 to turn on the EL backlight.
- Press and hold S1 for 3 seconds to enter the Setting Mode.

2. Date Mode

- Month and Date Display
- It will auto return to Normal Time Mode if no key is pressed within 2 seconds.
- Press S1 to turn on the EL backlight.

3. Setting Mode

- In Normal Time Mode, Press and hold S1 for 3 seconds to enter the Setting Mode.
- Press S1 to select the setting digit, and press S2 for increment of the blinking digit.
- The setting sequence will be as follows:
(Seconds → Hour → Minute → Month → Date → Exit and return to Normal Time Mode)

Battery replacement:

- CR1220 or equivalent battery