

 


## BASIC MOVEMENT

### VESTAL WATCH

730 WEST 17TH STREET  
COSTA MESA CALIFORNIA 92627  
TEL: 949.631.7036 FAX: 949.631.7550

INFO@VESTALWATCH.COM  
WWW.VESTALWATCH.COM

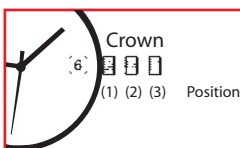


#### BASIC CROWN SETTING TIME

##### Time Setting/Operation B

If you have just set the date on your Vestal Watch, lightly tug on your watch's crown until it lands in position (3). Turn crown either clockwise or counter clockwise to set desired time.

##### Closing Crown

 When operations A and B are complete, push crown inward to its original position (1).

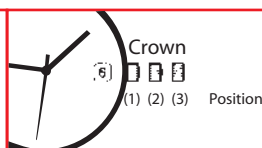

#### BASIC CROWN DATE & TIME

##### Date Setting/Operation A

 
If you have just purchased your Vestal Watch, your watch's crown should be seated in position (1). Lightly tug on the crown until seated in position (2). Rotate crown counter clockwise until your desired date is achieved.

##### Time Setting/Operation B

If you have just set the date on your Vestal Watch, lightly tug on your watch's crown until it lands in position (3). Turn crown either clockwise or counter clockwise to set desired time.

##### Closing Crown

When operations A and B are complete, push crown inward to its original position (1).

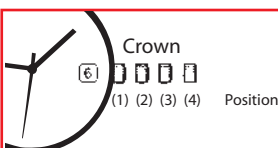

#### THREADED CROWN DATE & TIME

##### Date Setting/Operation A

If you have just purchased your Vestal Watch, your watch's crown should be seated in position (1). Turn crown counter clockwise until it spins freely and lands in position (2). Once the crown is in position (2), lightly tug on the crown until seated in position (3). Turn crown counter clockwise until your desired date is achieved.

##### Time Setting/Operation B

If you have just set the date on your Vestal Watch, lightly tug on your watch's crown until it lands in position (4). Turn crown either clockwise or counter clockwise to set desired time.

##### Closing Crown

Assuming you've just completed operations A and B, you'll want to return your watch's crown to its original position. Place crown between your index finger and thumb. Push crown inward toward its original position (1). While still pushing crown inward, rotate in a clockwise direction. In about 3 to 4 turns your watch's crown will seat itself in its original position.

#### WARRANTY

Your VESTAL limited warranty covers defects in materials and workmanship for a period of three years from the date of purchase. The warranty does not cover the watch case, battery, strap, bracelet, crystal and crown. Damage resulting from improper use, accidents, and normal wear and tear is not covered. Water damage is not covered unless the watch is marked 10 atm water resistant. VESTAL's warranty is void if the product is disassembled in any manner by any party other than a certified watch repair professional.

If you live in North America and the watch is defective, please call (949) 631-7036 or email [warranty@vestalwatch.com](mailto:warranty@vestalwatch.com) for a Return Authorization (RA) number. Watches sent back to us without a Return Authorization (RA) number will not receive service and will be shipped back at owner's expense.

#### RETURN ADDRESS:

Vestal Watch  
ATTN: RA # \_\_\_\_\_  
730 West 17th Street  
Costa Mesa, CA 92627

#### CARING FOR YOUR WATCH BAND

If your watch band is made of leather, try to avoid getting it wet. Water will ruin the leather. In the event that the leather band needs to be replaced, VESTAL has a limited supply of replacements that can be sold back to you.

To keep the integrity of the exclusive design of your Vestal watch, we do not switch bands on watches for other material types or colors. If your VESTAL watch is equipped with a stainless steel band and it has been exposed to salt water, rinse band in fresh water soon after exposure.

#### BATTERY REPLACEMENT

In most cases, if you watch stops then it is time for battery replacement. Contact a certified watch repair specialist to have them install a new battery. Always request the watch repair specialist to lubricate and reseal caseback and crown to ensure original water resistance is maintained.

#### WHAT WATER RESISTANCE ACTUALLY MEANS

A quick reference guide to help you understand the water resistance ratings for watches and the various activities you can expose your watch to without water damage is below. Watches, no matter what the water resistance is, should not be worn in any hot tub, hot shower, sauna or steam room.

##### 3 ATM = Splash Resistant

Suitable for a light rain or drizzle.

##### 5 ATM = Water Resistant

Suitable for a rain, water balloon fight, or wading in a pool.

##### 10 ATM = Water Sports Worthy

Suitable for swimming, surfing, diving up to 100 meters.

##### 30 ATM = Submarine Worthy

Suitable for extreme depths of up to 300 meters.